



CODES:

008525 - 008535 - 008545 - 008565	S
008526 - 008536 - 008546 - 008566	BL
008527 - 016132 - 008547 - 008567	W



**COMPATIBLE CON CODIGOS
DE ACCESORIOS:
Compatible with codes:**

ESSENTIAL


Sede interna (D^*)
Internal opening (D^*)

A=H-83

[illegible]

Sede interna (D^*)
Internal opening (D^*)

x2 FRENO RETENEDOR / x2 Retainnig stopper

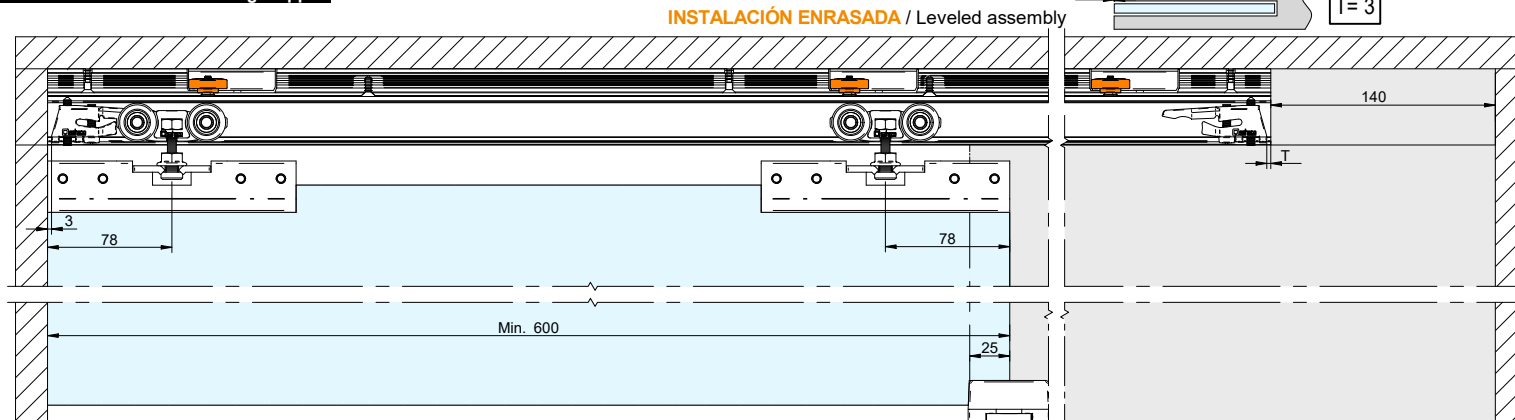


INSTALACIÓN SOLAPADA / Overlap assembly



x1 SOFTOP DOBLE / x1 Double Sotop

INSTALACIÓN ENRASADA / Leveled assembly

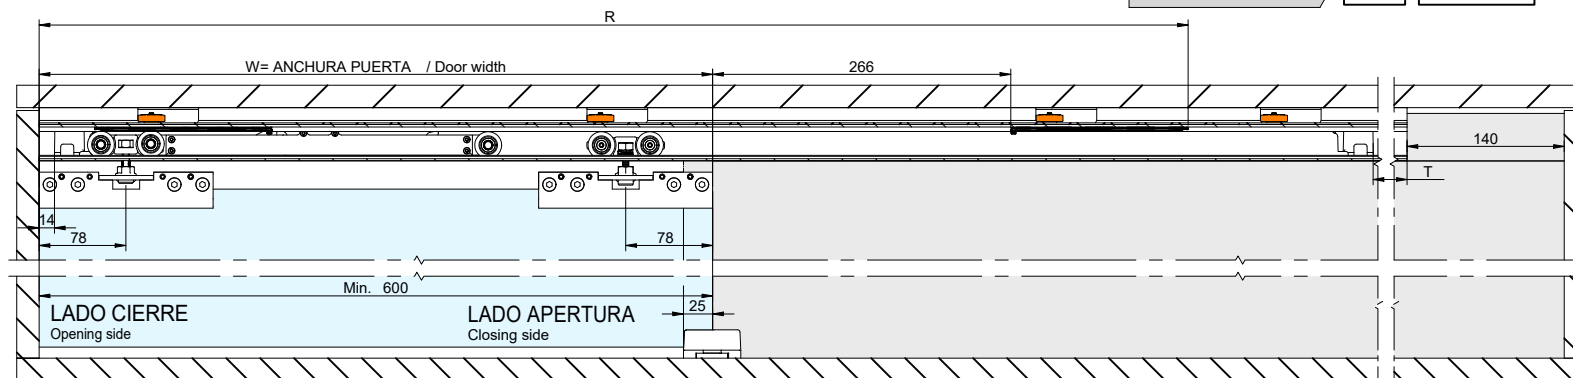

$$D^* = E + 11\text{mm}$$

*Min 51mm

INSTALACIÓN SOLAPADA / Overlap assembly



$$T = 12 + S$$


$$R = W + 266 + S$$

② MONTAJE PERFILES / Assembly profiles

$$X = Y + 165$$

$$W = Y + 25$$


$$K = (Y \times 2) + 25$$

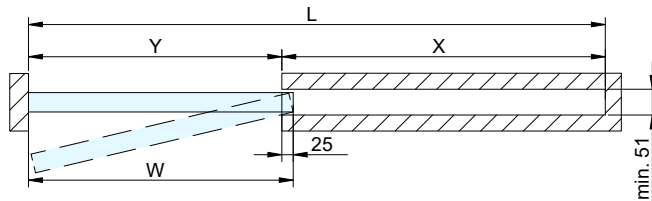

Y= PASO DE LUZ / Clear opening
W= PUERTA / Door

(Y)	(Z) MIN.
1100	2100
1200	2100
1300	2300
1400	2500
1500	2700
1600	2800
1700	3000
1800	3400


$$K \leq D - 110$$

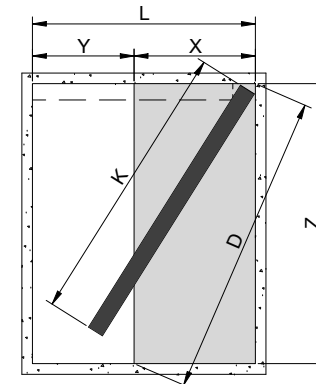

CORTAR PERFIL SIEMPRE DE ESTE LADO /
Cut profile always on this side


③ MONTAJE COMPONENTES / Assembly components

x2 FRENO RETENEDOR / x2 Retainig stopper

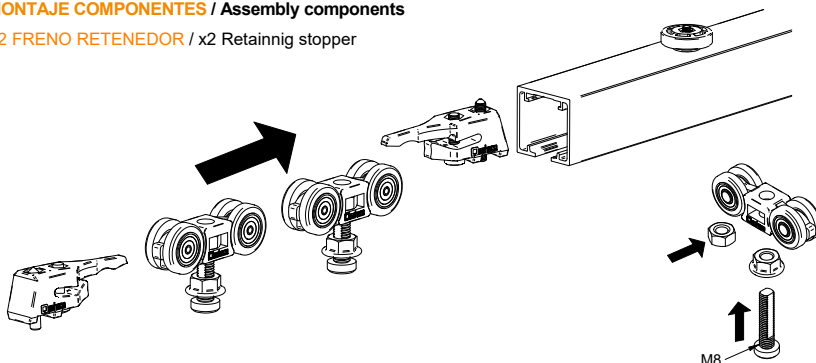


④ MONTAJE COMPONENTES / Assembly components


x1 SOFTOP DOBLE / x1 Double Softop

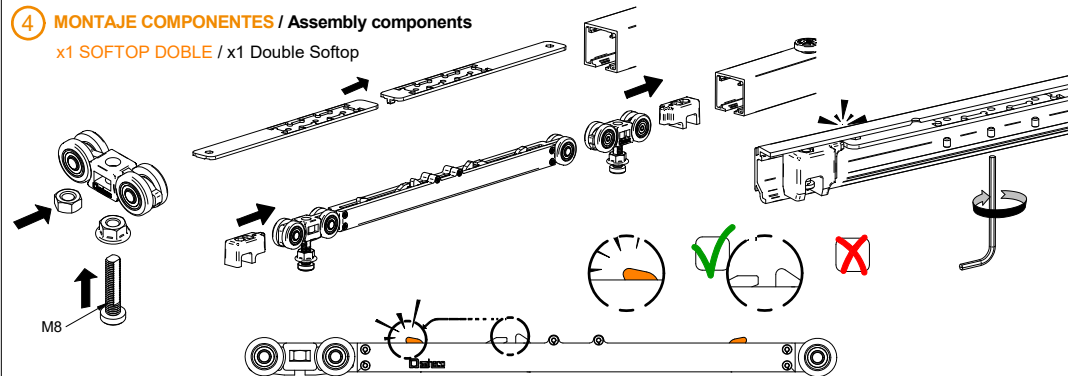


⑤ FIJAR PERFIL FT A TECHO / Install Support FT Track to ceiling

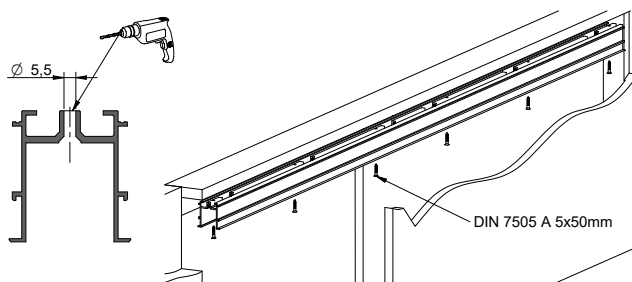


⑥ INTRODUCIR PERFIL STAR CONTRA EL PERFIL FUNDA / Inset STAR Track to the Support FT Track

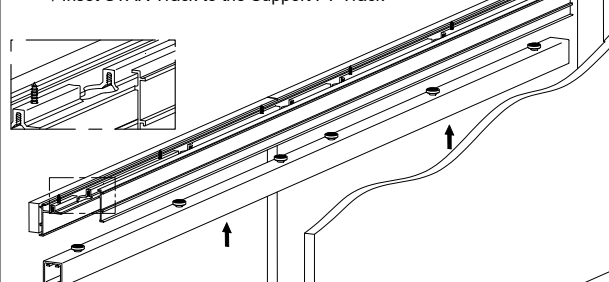


⑦ INTRODUCIR EN RANURAS / Insert into slots

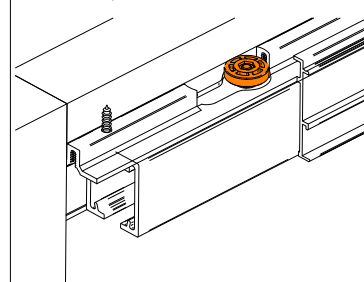


⑧ MOVER HASTA TOPE / Slide until limit

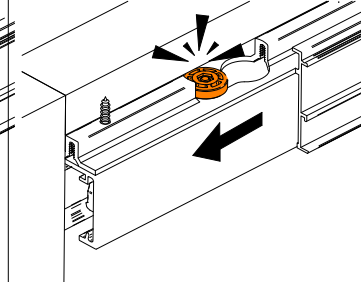


⑨ FIJAR LOS DOS TORNILLOS (Z) EN EL PASO DE LUZ PARA UNIR LOS PERFILES / Fix the two screws (z) in the clear opening to join tracks

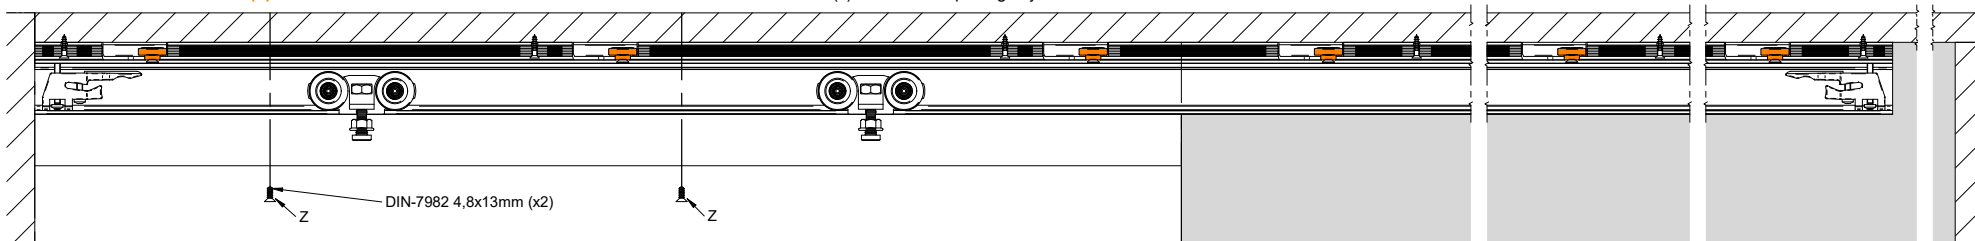


10 MONTAJE PINZAS / Clamps assembly

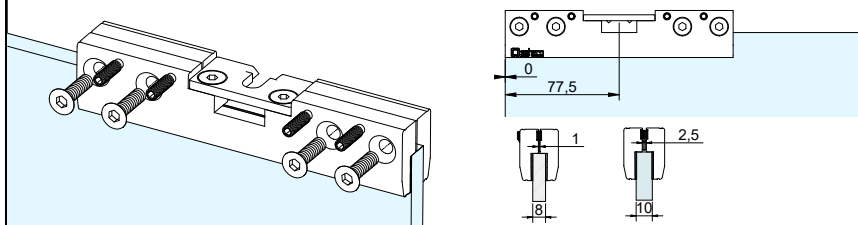


**11 PRIMER PASO: AJUSTAR TORNILLOS AJUSTE GROSOR VIDRIO
FIRST STEP: ADJUST GLASS THICKNESS SCREWS**

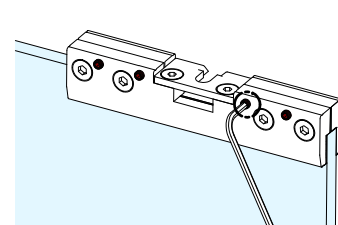



**SEGUNDO PASO: APRETAR TORNILLOS APRIETE PINZA
SECOND STEP: STRENGTH CLAMP THIGTHEN SCREWS**

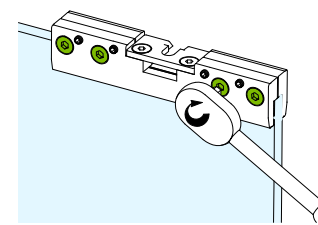


**TERCER PASO: APRETAR TORNILLOS AJUSTE GROSOR VIDRIO
THIRD STEP: STRENGTH THE GLASS THICKNESS SCREWS**

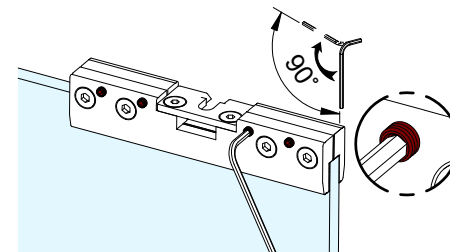


12 MONTAJE PUERTA LADO APERTURA / Opening side assembly

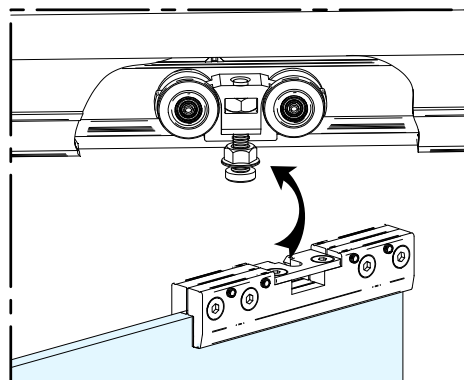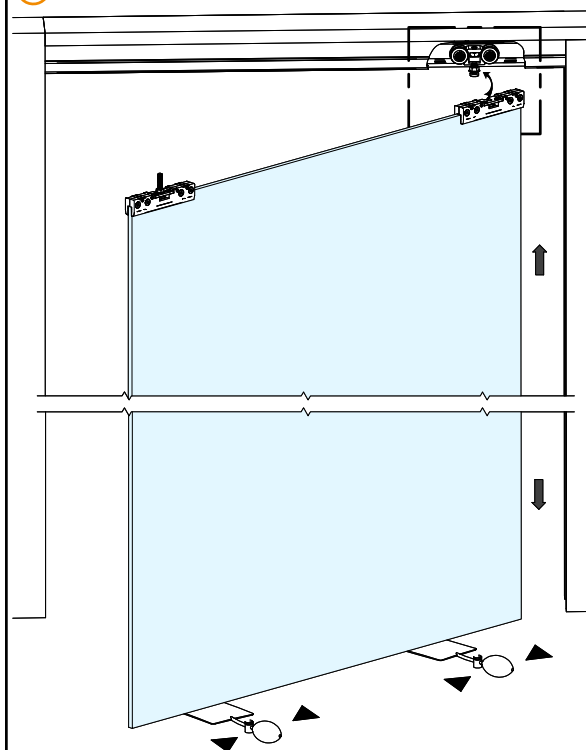


AJUSTAR ALTURA / Height adjustment

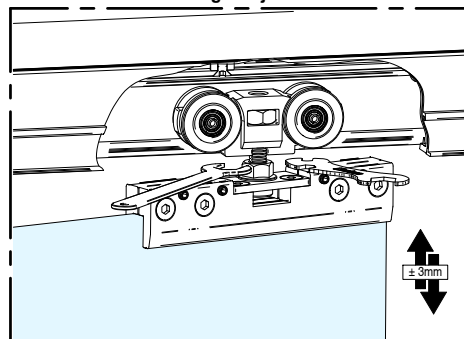

13 MONTAJE PUERTA LADO CIERRE / Closing side assembly


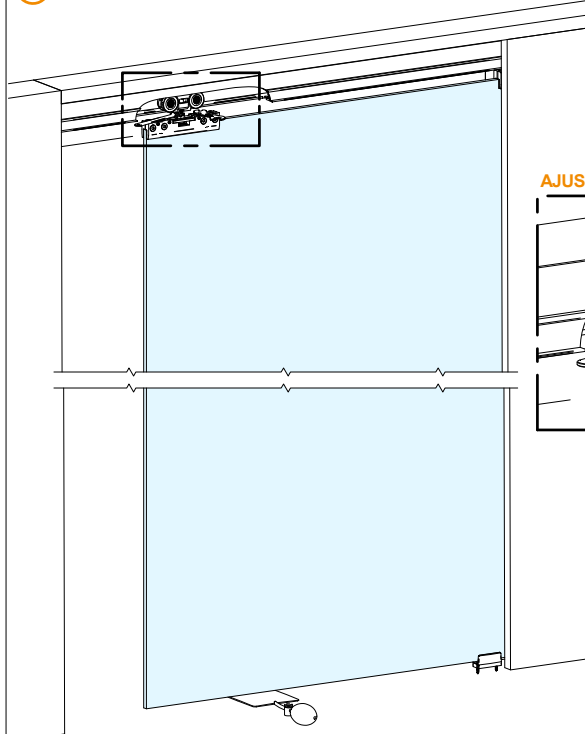


AJUSTAR ALTURA / Height adjustment

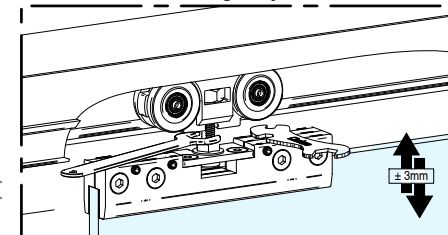



14 MONTAJE CLIP TAPETA MADERA / Assemble wooden lid clip

2-3M	8
4-6M	12

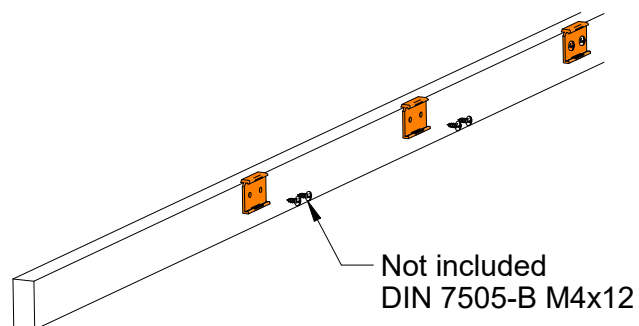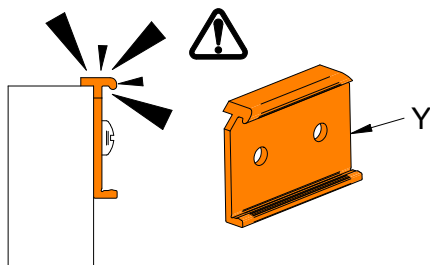

15 CLIPAJE TAPA / Cover clipping

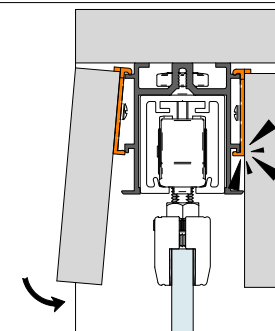




CODE: 006612


a		1
b		1
c		2

d		1
e		2
f		1



g		2
h		2
i		2
j		2

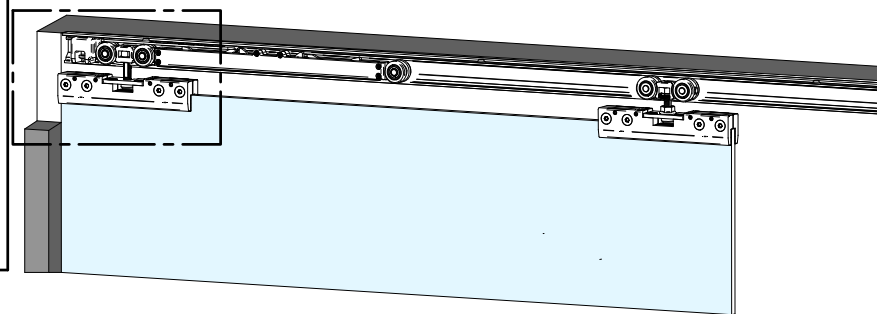


FUERZA ABRIR/CERRAR · Opening/closing force = $29 \pm 1\text{N}$ ($2.9 \pm 0,1\text{Kg}$)
FUERZA DESPLAZAR · Displacement force = $9 \pm 1\text{N}$ ($0.9 \pm 0,1\text{Kg}$)

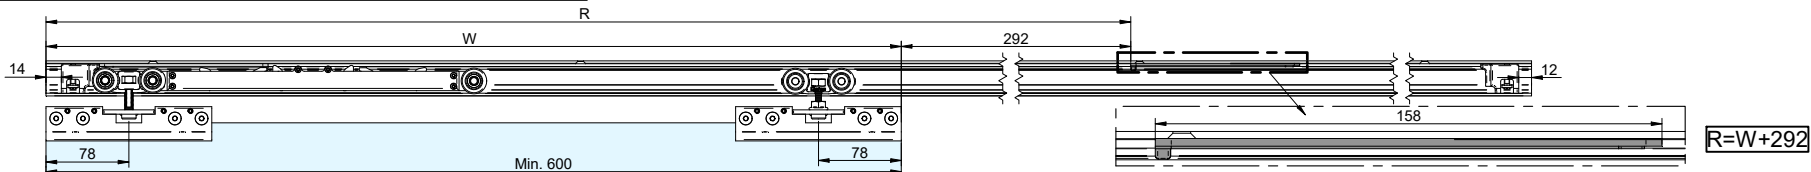


PERFIL EXCELLENCE / Track Excellence / Profil Excellence

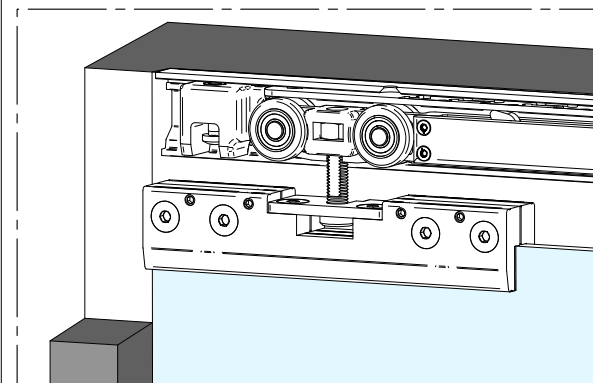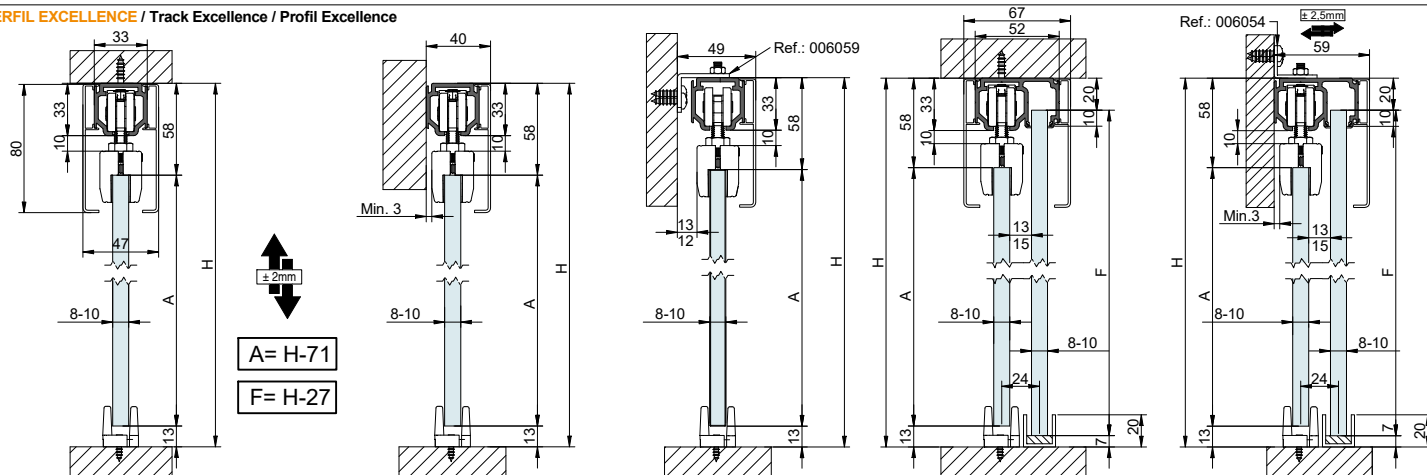


PERFIL STAR / Track Star / Profil Star

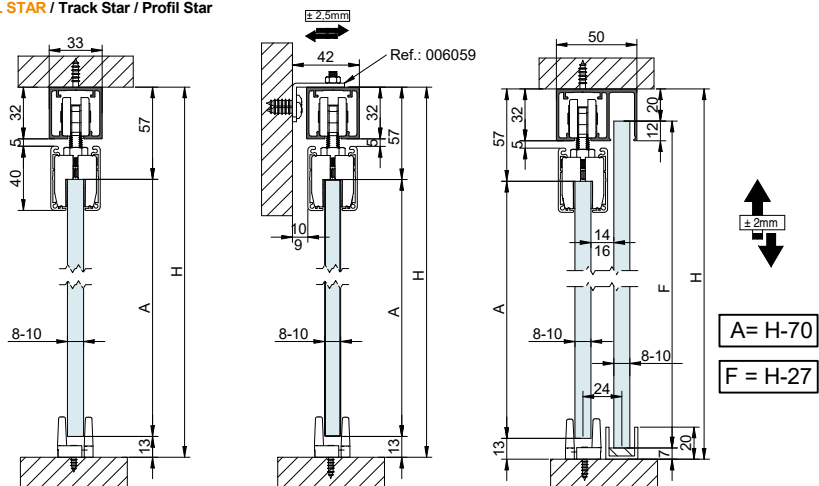

PERFIL STAR FALSO TECHO / Track Star for plasterboard / Profil Star pour plaques en plâtre

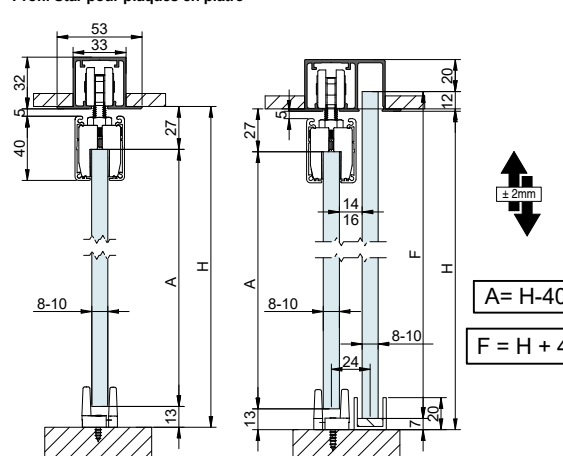

PERFIL STAR FTI FALSO TECHO / Star Track FTI False Ceiling

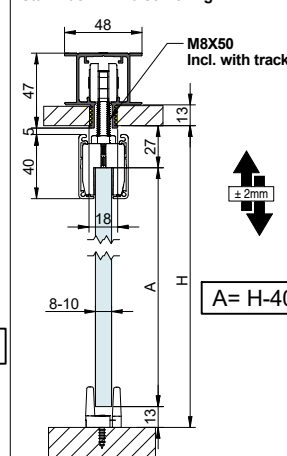

MONTAJE PERFIL FUNDA / Assembly Support FT track

